

请仔细阅读说明书，并留存，以备将来参考之用

本产品执行 Q/TPJT 1-2006 标准

MC 沪制 02290040 号

上海沙逊
SASEY
专业运动计时仪器

SST-3LCD 台式停秒钟使用说明书

特征说明

- 显示月、日、星期、时、分、秒
- 可选择 12 及 24 小时
- 1/100 秒计时及分段计时
- 每小时报时
- 每日定时响闹功能
- 防震结构

秒表计时

按 A 键直至秒表显示，若秒表不为零，按 B 键停止计时，按 C 键复位到零。

I、简易计时：


按 B 键开始计时；再按 B 键，停止计时；
(重复 按 B 键，重新开始/停止)
停止计时后按 C 键复位到零。

II、分段计时：

按 B 键开始计时；
按 C 键显示分段时间，注意：内部计时持续；再按 C 键，复位到计时；
(重复按 C 键，重复显示分段时间及复位)
复位到计时后按 B 键停止计时；
按 C 键复位到零；

III、两段时间显示：

按 B 键开始计时；
按 C 键显示第一分段时间；
按 B 键显示第二分段时间；
按 C 键显示第二段时间；
再按 C 键复位到零。

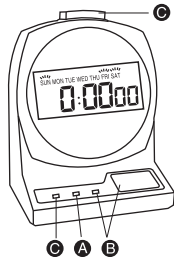

时间、日历、星期、响闹显示

按 A 键直至显示正常走时，按 B 键显示月、日和星期；
按 C 键显示响闹时间，同时按住 B 键和 C 键响闹取消 / 保持。

设置时间、日历

在正常走时，状态按 A 键三次。正常走时的秒及星期闪烁。
这样进入了时间设置状态，按 B 键置数按住不放，快速置数。按 C 键选择秒、分、时、日、月、星期 (A / P 为 12 小时制，“A”代表为上午，“P”为下午，“H”为 24 小时制) 作为调整对象，调整完毕，按 A 键回到时间显示状态。

设置响闹时间

在正常走时，按 A 键两次，时和星期同时闪烁，这样进入了响闹设置方式。按 C 键选择时和分，按 B 键改变分和时数字。按 A 键回到时间显示。

每小时报时

按 A 键直至显示正常走时，按 C 键后；同时按 A 键，每小时报时之功能可取消 / 保持。在保持状态，星期指标会全部显示。

注意事项

避免受潮。
避免与腐蚀性物体接触。
避免在温度过高或过低的环境下使用。
不宜长时间在太阳下曝晒和置于强光下照射。
本表采用 1.5V 碱性扣式电池，如 LR44 或其它相同规格的扣式电池。

上海沙逊钟表有限公司
地址: 上海市长宁区 1277 弄 25 号 301 室
电话: 021-52410333、52410222
传真: 021-52418077
E-mail: shaxun@sasey.com.cn
邮编: 200051

Before using the clock, please read the handbook and keep it for referring in the future.

The liquid crystal table stopclock

Timing

Press button A till second number is displayed. If the second number is not zero, press button B to stop timing, then press button C to reset the stopwatch back to zero, press button B to start timing, press button B once again to stop timing. (Press button B repeatedly will get the watch started/stopped repeatedly) Press button C to reset the stop watch back to zero.

Display time, calendar, weekday and alarm

Press button A till the stopwatch is in time mode, then press button B to display the month, date and the weekday; press button C to display the alarm time, then press button B and button C at the same time to sound the alarm, cancel/maintain.

Set time and calendar

When the stopwatch is in normal time mode, press button A 3 times. The second number and the weekday will flash, it indicates the stopwatch has entered into the time setting mode. Press button B to advance the number. (Press the button to advance the number quickly) Press button C to choose second, minute, hour, date, month and weekday (A/P is 12 hours mode setting, A stands for the morning, P stands for the afternoon. H stands for 24 hours mode setting) these are the adjusted objects. After setting, press button A to return to time mode.

Set alarm

In the normal time mode, press button A twice, time and weekday will flash simultaneously, this indicates the stopwatch is in the alarm mode. Press button C to choose hour and minute, press button B to advance the number of the hour and minute. Press button A to reset back to time mode.

Set hourly alarm

In the normal time mode, press button C still first, then press button A, the weekday will display the hourly alarm, if no weekday displays, then there will be no alarm.

Caution

- 1) avoid humidity
- 2) avoid contacting the corrosive material
- 3) avoid using it in over-high or over-low temperature environment
- 4) not suitable to be put in the sun or in the high light
- 5) 1.5V Alkaline Battery

